FAQ_How to Create the UMG-2000 Series user account, and let ATA-150 and X-Lite to register on the UMG-2000 Series.

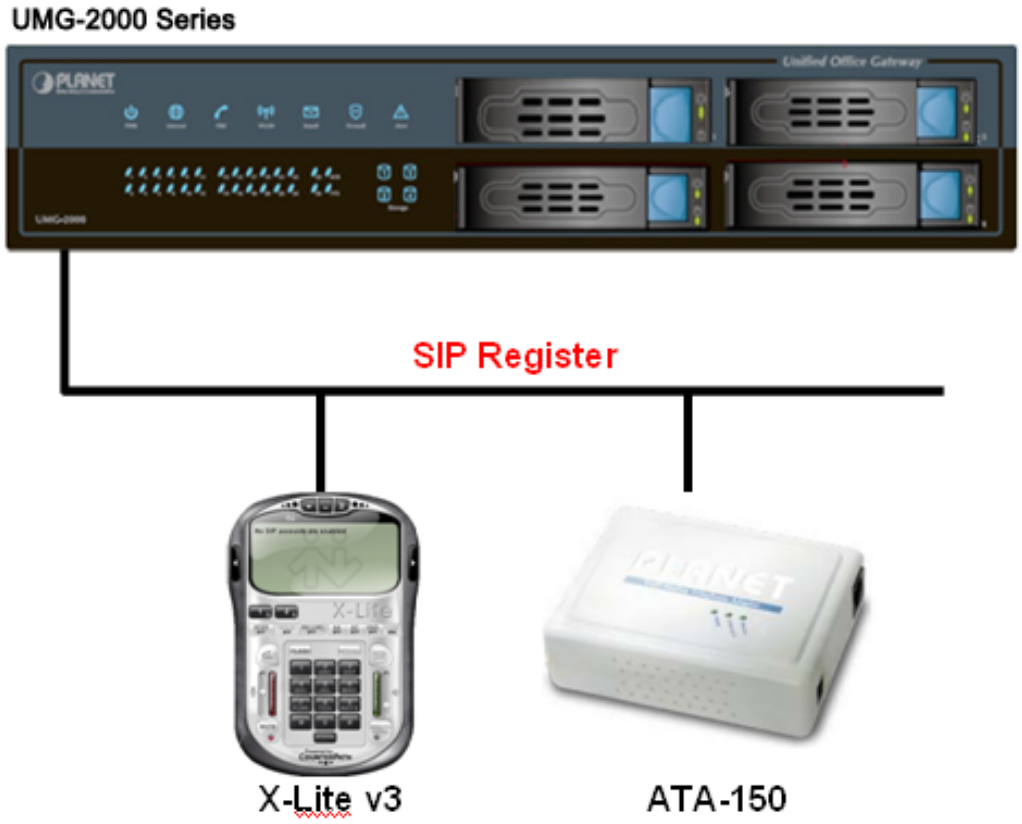

***** FW & Utility version List:**

UMG-2000:v.3.6.4

ATA-150:v1.1

X-Lite:v3.0 build 56125

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Create your UMG-2000 user account：

Step1. Please login to your UMG-2000 web-ui, and press the “**Admin**” button.

Step2. Go to “**User**” page, and press the “**Add User**” to create the user account.

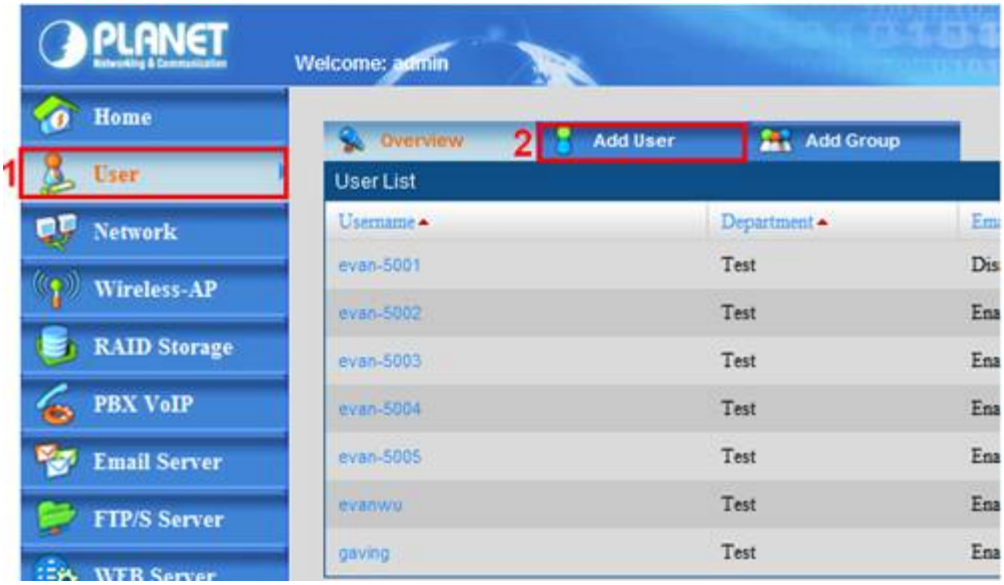

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Step3. Input the Username, password..., and modify the "**Extension**" number you want.
After setting complete, please press the "**Apply**" to apply the configure.

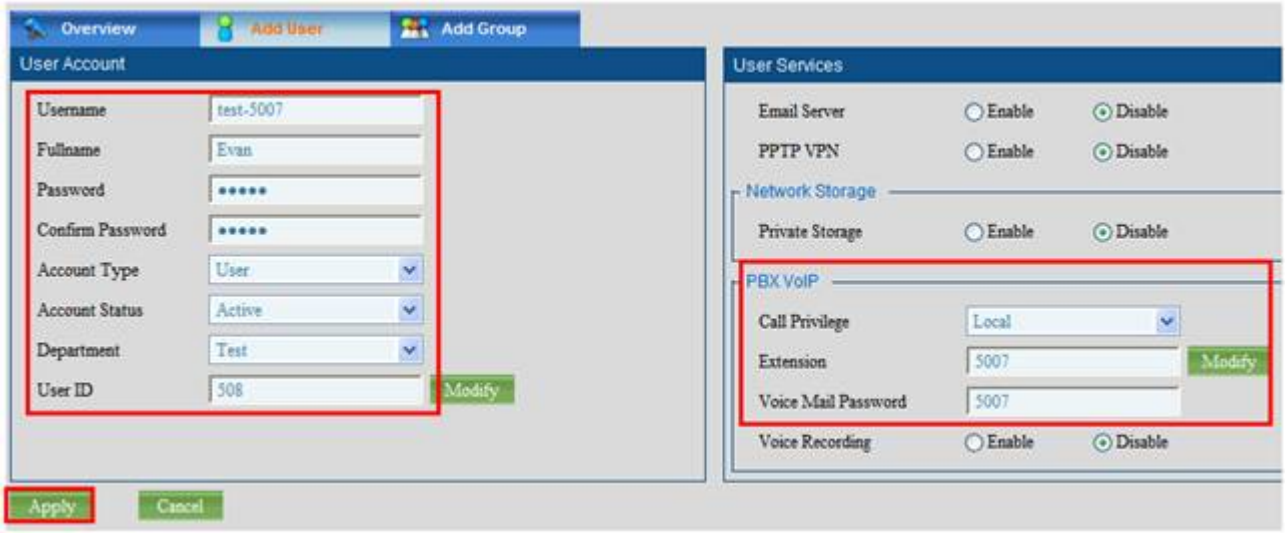

USER ACCOUNT:

This section lists all the available settings of the user profile:

User name: Specifies a user name. All users related IT services will be created based on this name. It cannot be changed once set.

Full Name: Specifies the user's full name.

Password: Specifies the user's access password. This password will be applied to all the user related services, too.

Confirm password: Confirms and verifies the entered user password.

Account Type: Specifies either a common user or admin user privilege. The user with the admin privilege can access the GUI management pages to manage the UMG-2000 Series except the storage service.

Account Status: Indicates whether the user account is in an active or suspended state. Active: all user subscribed IT services can be optionally enabled. Suspended: all user subscribed IT services are disabled.

Department: Indicates a proper group or department for the user. You can create a new group or department by clicking the "Group" tab from the "User" screen.

User ID: Specifies a unique user identifier for the user. The default value is recommended.

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

USER SERVICES:

This section lists all the available settings of the user services:

Email: Allows or denies user Email services.

PPTP VPN: Allows or denies a user's VPN remote access privileges.

Private Storage: Allows or denies a user's local storage access.

Storage Quota: Specifies the maximum user quota.

IP PBX phone privilege: Allows or denies a user's VoIP phone access.

Disable: Denies a user's VoIP phone access.

Local: Allows the user to dial a local external phone.

National: Allows the user to dial a national external phone.

International: Allows the user to dial an international external phone.

Extension: Specifies the VoIP phone number of the specific user which starts with the local dial prefix. It must be specified if the IP PBX phone privilege is not disabled and it cannot be changed once applied.

Voice Mail Password: Specifies the password that is used to access the voice mail. It must be specified if the IP PBX service is enabled.

Also, you can download the UMG-2000 user manual at our Web-site：

http://www.planet.com.tw/en/dl_file.php?fn=product/images/24383/EM-UMG2000_2200_v1.0.pdf

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Use ATA-150 to register to UMG-2000：

Step1.Connecting Telephone：

Using a telephone cable, connect your telephone to the Phone port of the Phone Adapter.

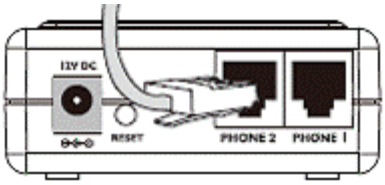

Step2. Connecting Network and Power AC Power：

Connect the included Ethernet network cable to the LAN port of the Phone Adapter.

Connect the included power adapter to the POWER port of the Phone Adapter.

The PWR, LNK/ACT, and RING LEDs will be solidly lit when the Phone Adapter is ready for use.

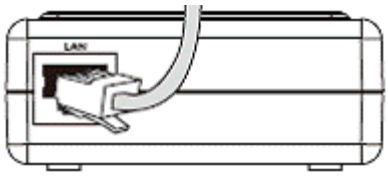

Step3. Basic Configuration & Administration Interface：

Using for soft utility to search SIP ATA from current network.

The utility not only easy-to-use and provides user more convenience for configuration access.

At the some time if you forget this IP address can also found that via the utility.

Please download the “SmartDiscoveryLite_v10.rar” at our FTP Server：

ftp://surve_guest:7194@ftp.planet.com.tw/SmartDiscoveryLite_v10.rar

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

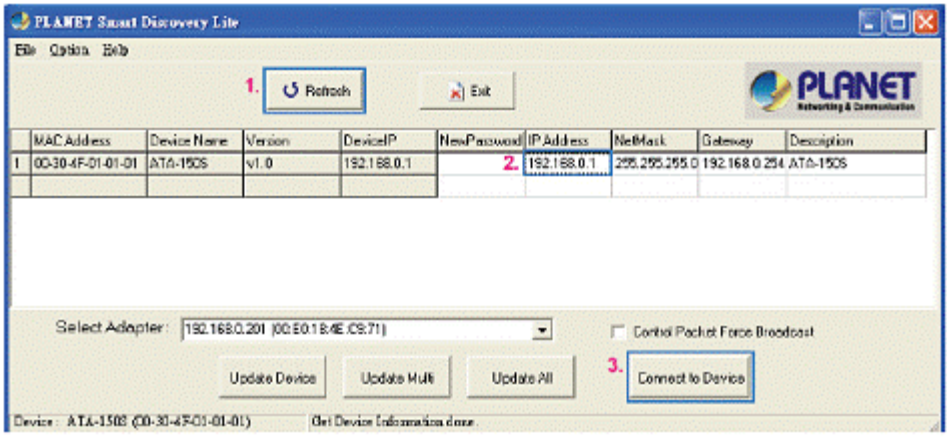

To press “**Refresh**” the button to show out the SIP ATA, then click IP Address item and press the “**Connect to Device**” button.

Step4. Login to your ATA-150 Web-UI：

You will connect to SIP ATA via your web browser automatically.

ATA will prompt for logon **username/ password, please enter: admin / 123** to continue machine administration.

*The default IP address of ATA is 192.168.0.1.

You also could open your web browser, and insert http://192.168.0.1 in the address bar on your web browser to logon ATA web configuration page.

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Step5. Configure the ATA-150 to register on UMG-2000：

(1)Press the “**SIP Setting**”.

(2)Press the “**General**” to open VoIP General Settings page.

(3)Press the “**Service Domain**” button.

(4)Display Name：Input the name you want.

Line Number：Input the UMG-2000 Extension number, Ex. 5007

Register Name：Same as the UMG-2000 Extension number, Ex. 5007

Register Password：Same as the UMG-2000 Extension number, Ex. 5007

Proxy：Tick the Enable

Proxy Server：Input your UMG-2000 IP Address.

(5)Press the “**Apply All**” to apply the setting, then if success to register on UMG-2000.

The “**Register Status**” will show the “Registered”.

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Also, you can see the UMG-2000 Web-UI “**PBX VoIP**” page, there is show the 5007 Extension is work and Registered.

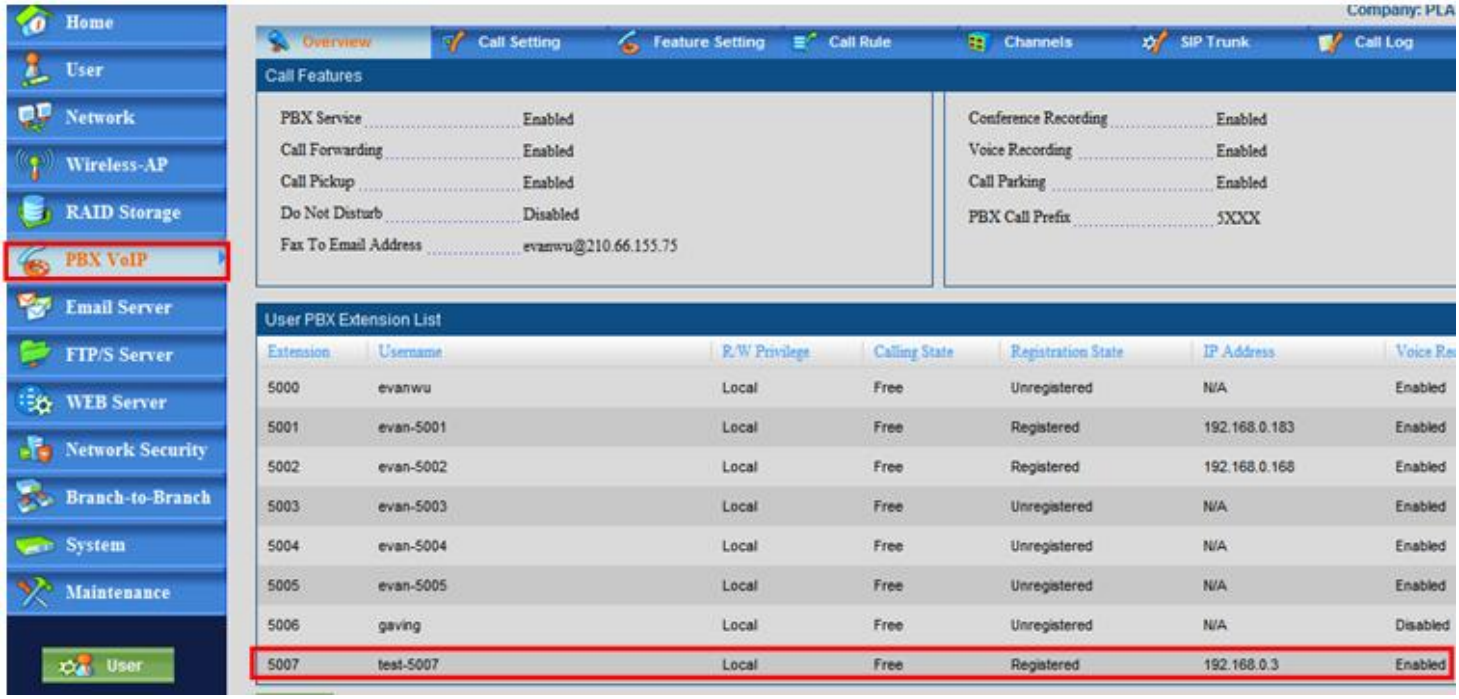

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Use X-Lite to register to UMG-2000：

Step1. Please download the X-Lite at X-Lite office web-page：
http://www.counterpath.com/x-lite.html

Step2. After download and install complete, please open the X-Lite software.

Step3. Click the "**Show Menu**" button, and select the "**SIP Account Settings**" to setup your SIP Account.

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Step4. Press the "**Add**" button to setup your SIP setting.

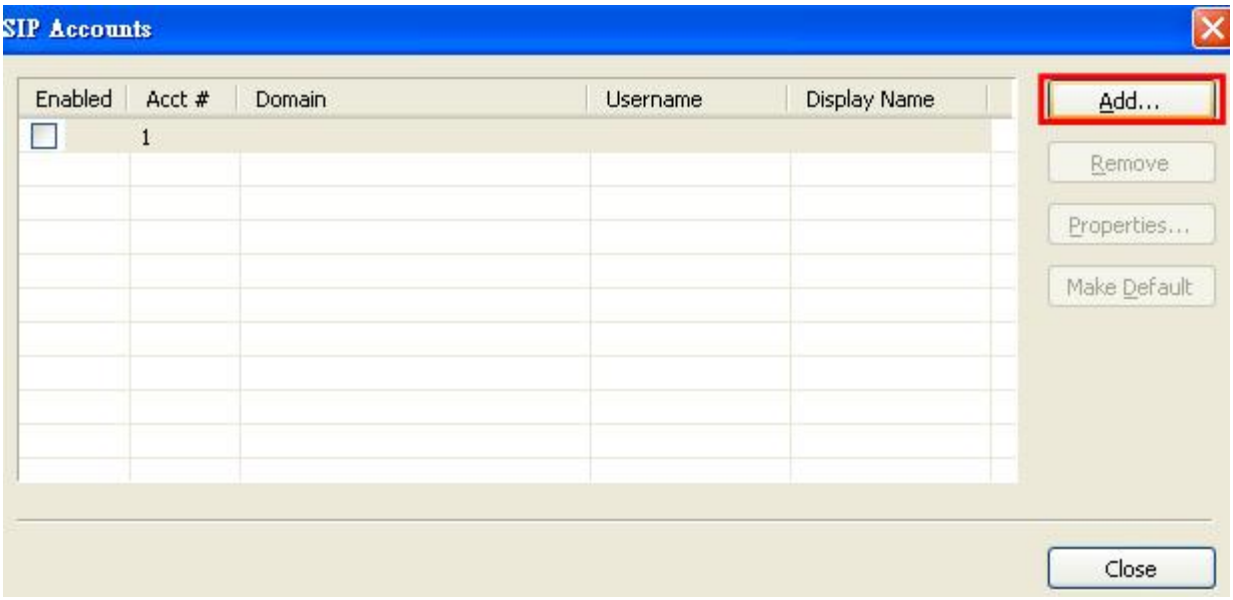

Step5. Input the setting and press the "**OK**" button to apply the setting.

*The Username and Password same as the UMG-2000 Extension number. Ex.5002

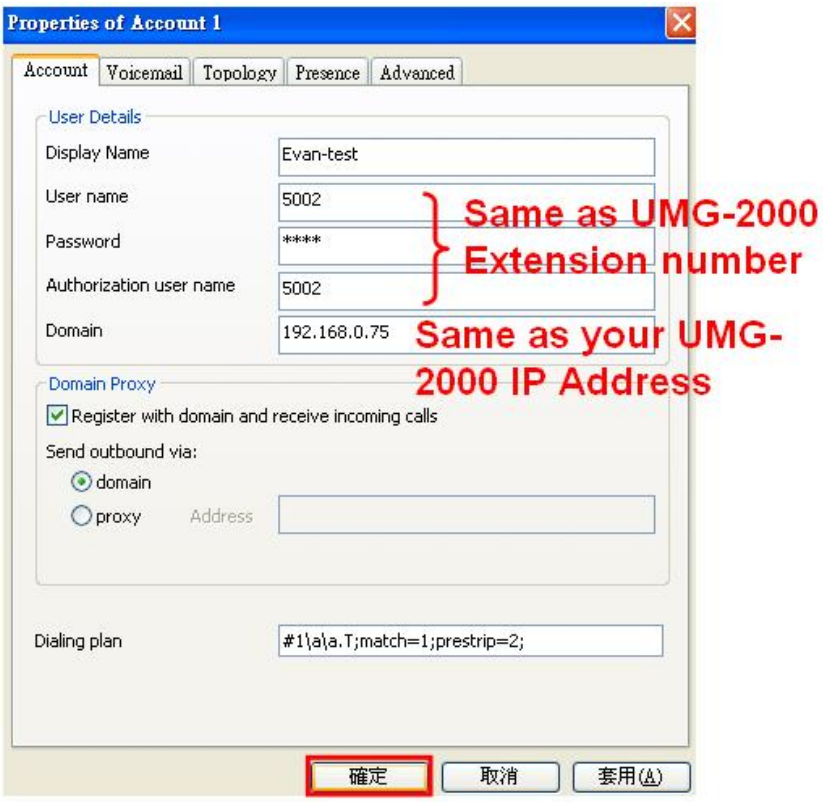

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved

Step6. After setting complete, you will see the "**Ready**" on the X-Lite Screen.
And you can use it now.

PLANET Technology Corporation
11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: support@planet.com.tw
Web site:http://www.planet.com.tw

Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved